

KEYBOARD

I - FUNCTION KEYS (FN)

 All functions are obtained by pressing the "Fn" key along with the desired function key.

| | | | |
|---|--|--|---|
|  Media player |  Volume down |  Volume up |  "Mute" |
|---|--|--|---|

| | | | |
|---|---|---|---|
|  Stop |  Previous track |  Play / pause |  Next track |
|---|---|---|---|

| | | | |
|---|---|--|---|
|  E-mail |  Homepage |  Lock keys |  Calculator |
|---|---|--|---|

2 - MACRO KEYS

Macro keys help you execute actions immediately, improving your response time in the game. You have 5 available macro keys, "M1" through "M5".

To start recording a macro, press the "Rec" key followed the desired macro key. The lights will start flashing on the panel and then you can start typing, key by key, the custom function that you want.

To end the recording, press again the "Rec" key. The lights will stop flashing and you may use the recorded macro function by pressing the designated macro key.

To delete a macro, simply press the "Rec" key followed by the intended macro key and again the "Rec" key.

3 - ILLUMINATION - COLORS

The illumination color is changed by pressing the "LED" key. There are 3 different colors available: red, blue, and purple.



4 - ILLUMINATION - INTENSITY

In order to increase the light's intensity press the key combination "Fn" + "Pg Up". There are 3 available levels.



In order to decrease the light's intensity press the key combination "Fn" + "Pg Dn". There are 3 available levels.



5 - ILLUMINATION - MODES

There are 3 illumination modes available: on, off and pulse. To change between illumination modes press the key combination "Fn" + "LED".



6 - WASD / ARROW KEYS

Combination of "Fn" + "W" key switches the normal function of "W", "A", "S", "D" by the arrow keys.




7 - GAMING MODE

Combination of "Fn" + "Windows" key locks the Windows key function and prevents it from being activated during the game. Press the key combination once to activate "Gaming Mode" and press again to deactivate it.



MOUSE

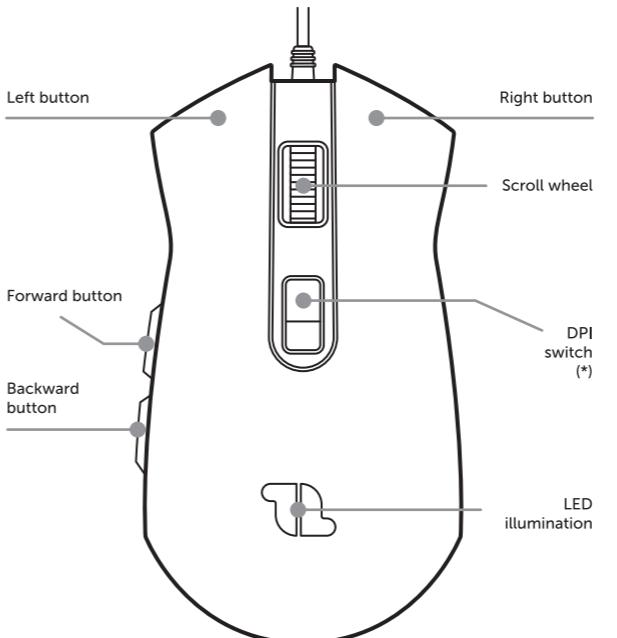

(*)

4 available steps: 800 / 1200 / 1600 / 2000 DPI

CE STATEMENT OF COMPLIANCE WITH EUROPEAN UNION DIRECTIVES

1Life declares that this product is in compliance with the essential requirements and other relevant provisions from the following Directive: 2004/108/EC, as applicable. The technical documentation required by the Conformity Evaluation process is in 1Life's possession and can be requested through contact@1-life.eu.

DISPOSAL OF BATTERIES AND ELECTRICAL OR ELECTRONIC EQUIPMENT WASTE

The existence of this symbol on the product, batteries or respective packaging, signifies that this product and the contained batteries can not be disposed as domestic waste. It is the user's responsibility to deliver this product at a batteries, electrical or electronic recycling pick-up point. The pick-up and separate recycling contributes for the preservation of natural resources and suppresses potential negative consequences for the human health and the environment resultant of inadequate disposal of dangerous substances contained in batteries and electrical or electronic equipment. For additional informations regarding batteries, electrical or electronic recycling pick-up points, please contact your local municipal services.

CE DECLARAÇÃO DE CONFORMIDADE COM DIRECTIVAS DA UNIÃO EUROPEIA

A 1Life declara que este produto está em conformidade com os requisitos essenciais e outras disposições relevantes da Directiva: 2004/108/CE, conforme aplicável. A documentação técnica exigida pelo processo de Avaliação de Conformidade encontra-se na posse da 1Life e poderá ser solicitada através de contact@1-life.eu.

ELIMINAÇÃO DE RESÍDUOS DE PILHAS E DE EQUIPAMENTO ELÉCTRICO E ELECTRÓNICO


A existência deste símbolo no produto, nas pilhas ou nas respectivas embalagens significa que este produto e as pilhas nele contidas não podem ser eliminados juntamente com os resíduos domésticos. É da responsabilidade do utilizador entregar este produto num ponto de recolha aplicável à reciclagem de pilhas e de equipamento eléctrico e electrónico. Esta recolha e reciclagem separada contribui para a conservação dos recursos naturais e suprime potenciais consequências negativas para a saúde humana e para o ambiente resultantes de uma eliminação inadequada de substâncias perigosas existentes nas pilhas e no equipamento eléctrico e electrónico. Para mais informações sobre os pontos de recolha de pilhas e resíduos eléctricos e electrónicos contacte os serviços municipais locais.

TECHNICAL ASSISTANCE / ASSISTÊNCIA TÉCNICA

For technical support please visit www.1-Life.eu or contact us through contact@1-Life.eu. Para questões de ordem técnica, por favor visite www.1-Life.eu ou contacte-nos através de contact@1-Life.eu.

TECLADO

I - TECLAS DE FUNÇÃO (FN)

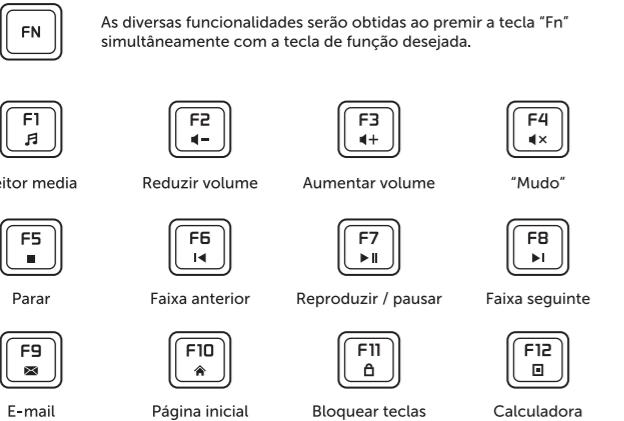

2 - TECLAS MACRO

As teclas macro auxiliam na execução imediata de acções, melhorando o tempo de resposta no jogo. Existem 5 teclas macro à disposição: da "M1" à "M5".

Para iniciar a gravação de uma macro deverá premir a tecla "Rec" e posteriormente a tecla macro desejada. As luzes irão começar a piscar no painel indicador. Poderá então iniciar a introdução, caractere a caractere, da combinação desejada. Para terminar a gravação deverá premir novamente a tecla "Rec". As luzes irão parar de piscar e a combinação macro gravada estará pronta a utilizar.

Para eliminar uma função macro, deverá premir a tecla "Rec", seguida da tecla macro desejada e por fim novamente a tecla "Rec".

3 - ILUMINAÇÃO - COR

Para alterar a cor da iluminação deverá premir a tecla "LED". Existem 3 cores à disposição: vermelho, azul e roxo.



4 - ILUMINAÇÃO - INTENSIDADE

Para aumentar a intensidade da iluminação deverá premir a combinação de teclas "Fn" + "Pg Up". Existem 3 níveis disponíveis.



Para reduzir a intensidade da iluminação deverá premir a combinação de teclas "Fn" + "Pg Dn". Existem 3 níveis disponíveis.



5 - ILUMINAÇÃO - MODOS

Existem 3 modos de iluminação: ligado, desligado e pulsante. Para alternar entre modos de iluminação deverá premir a combinação de teclas "Fn" + "LED".



6 - TECLAS WASD / CURSOR

A combinação das teclas "Fn" + "W" irá alternar a função normal das teclas "W", "A", "S", "D" pelas teclas de cursor. Prima novamente para repor a predefinição.




7 - MODO GAMING

A combinação de teclas "Fn" + "Windows" bloqueia a função da tecla Windows, previnindo que a mesma seja activada durante o jogo. Prima a combinação para activar o "Modo Gaming". Prima novamente para desactivar.



RATO

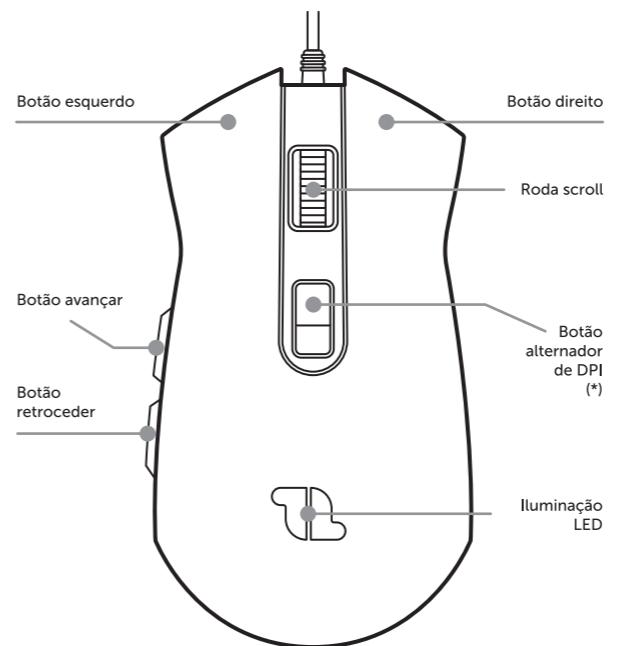

GAMING KEYBOARD + MOUSE
TECLADO + RATO GAMING

User Guide
Guia de utilizador